


Installation Instructions

**SWIVALOCK™ Connector**

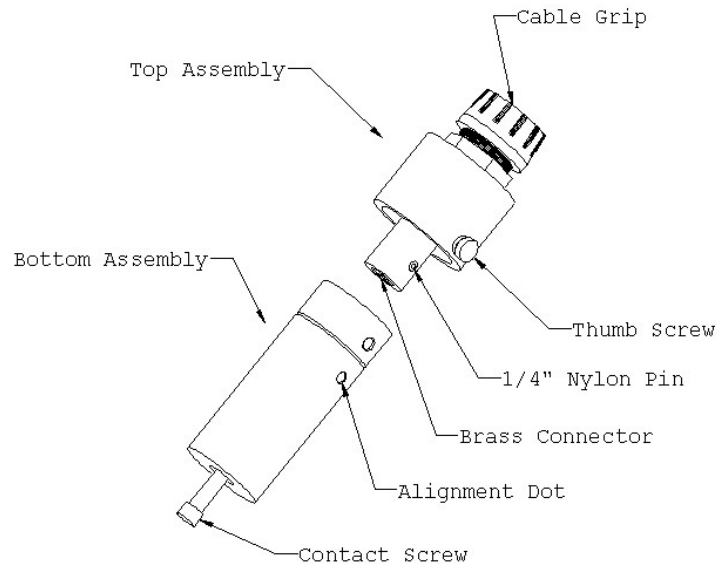

**INSTALL THE CABLE**

1. Insert the Contact Screw into the Bottom Assembly and screw in the T-Bolt Tool tightly to lock it in place. Loosen the nylon Thumb Screw, and unscrew the Top Assembly
2. Push the ¼" diameter nylon Pin out of the Top Assembly and remove the Brass Connector
3. Install the Cable through the Top Assembly and into the Brass Connector in accordance with Con Ed standards
4. Put the Brass Connector back into Top Assembly, reinstall the Pin, and tighten the gray Cable Grip
5. Screw Top Assembly tightly back onto the Bottom Assembly. Remove the T-Bolt Tool.

**FASTEN TO A STUD**

1. Tighten the SWIVALOCK™ Connector onto the stud all the way. Then back-off slightly (1/4 turn or less) so that the Top Assembly swivels
2. Rotate the Bottom Assembly to align the Thumb Screw with the Single-Dot (or the pair of Double-Dots if the Thumbscrew isn't visible). Tighten the Thumb Screw into the mating hole in the Bottom Assembly
3. Re-tighten the SWIVALOCK™ Connector firmly onto the stud.